


## Polarizer Installation Instructions

for Nokia N82 cellphone

February 2008


*Here is how things will look when you are done:*

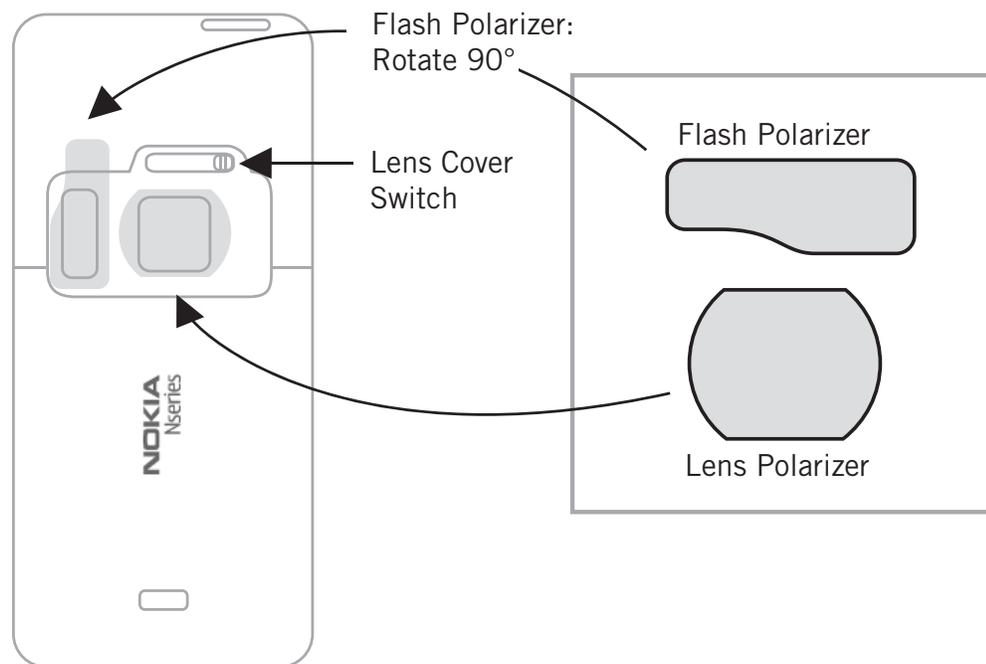


1. Open the lens cover with the lencover switch (see below).
2. Make sure that the lens is completely clean, without any smudges. If you see dirt or dust, consider using a professional cleaning tool such as compressed/canned air (at room temperature) or a lens cloth.
3. Close the lens cover slider to protect the lens.
4. With a soft cloth, wipe off any dirt or grease on the flash windows and the area around the lens.

## Application Instruction Directions Continued


**Caution:** When separating the flash and lens polarizers from the sheet, only handle them by the edges.

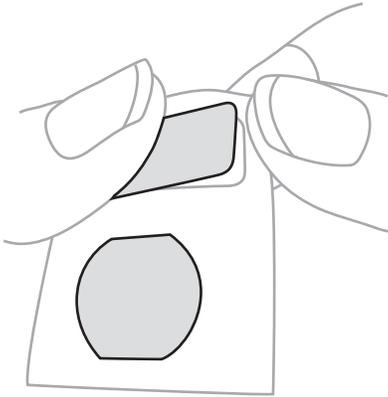


5. Grasp the flash polarizer between thumb and forefinger. With the other hand, bend the surrounding material down to separate the flash polarizer from the paper backing.

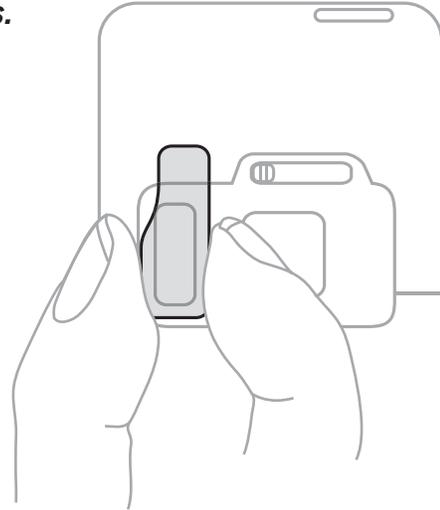

6. Hold the flash polarizer by the **edges**. Align the bottom left corner of the polarizer so it matches the bottom left corner of the silver metal around the flash. Apply gently, then nudge into place.

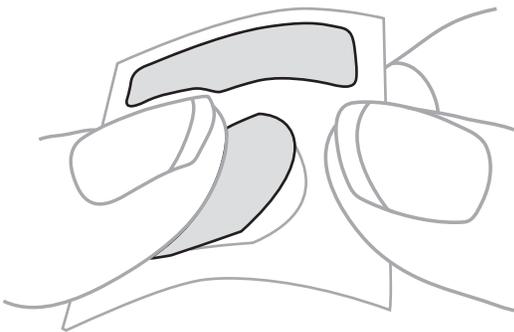


7. Bend the sheet so that the lens polarizer separates from the paper backing. **Do not bend the lens polarizer.**

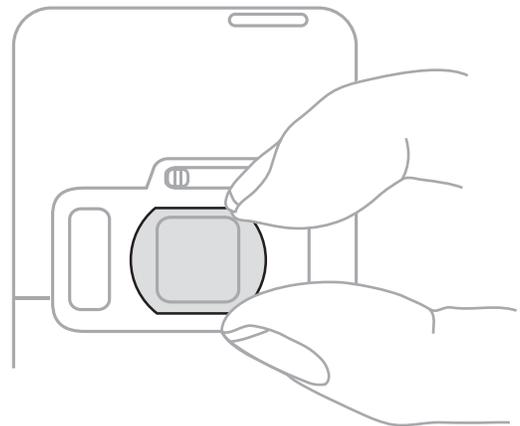


8. Hold the lens polarizer by the edges. Important: The flat edges of the polarizer should be **perfectly parallel** to the top and bottom edges of the camera assembly. Do not push on the center of the polarizer.


## Application Instruction Directions Continued

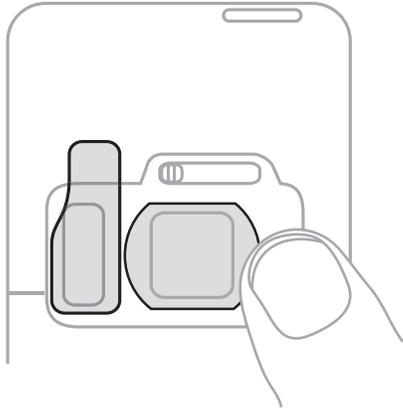


9. Push down around the edges of the lens polarizer that are touching the camera assembly. Do not push on the center.

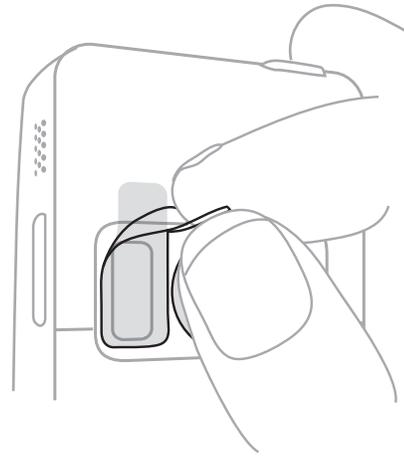

10. Peel off the pink protective film from the flash polarizer.

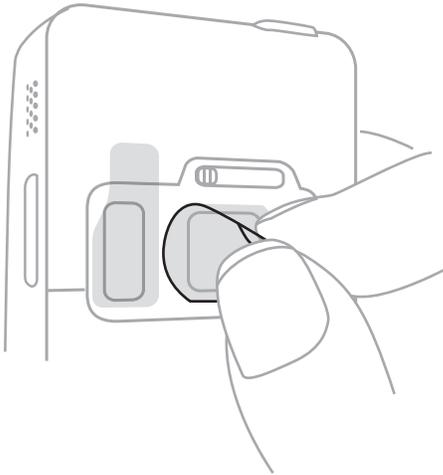

11. Peel off the pink protective film from the lens polarizer.

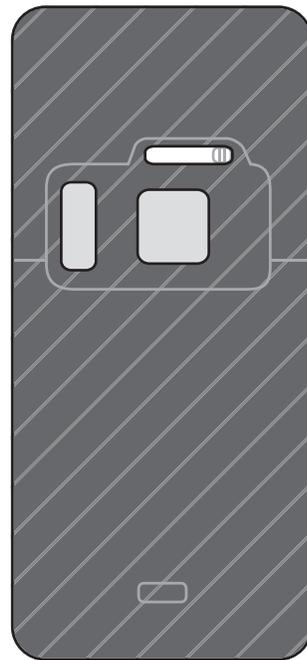

12. Finally, we recommend using a protective case to protect the polarizers when the camera side of the phone is touching a surface.